



GD87, GD87W

INSTALLATION INSTRUCTIONS

1. Use two wire nuts to attach the appropriate transforme wires to the field wiring.
2. Cut off the bare portion of the un-used leads.

Hardware Reference:

Model **GD87** Mounts to all Atlas Sound 8" baffles except FA series

Model **GD87W** is compatible with the following Atlas Sound hardware items:

Mounting Rings: 75-8(E2), 76-8(E2), P77-8, P78-8

T-Bridges: 81-8R, 81-8S

Enclosures: (EZ)95-8 Series, T95-8 Series, Q408, CS95-8, BMT95-8, BMT95-8-7

TAP WATTAGE	
1	Red
2	Orange
4	Blue
8	Yellow
COMMON	BLACK

Frequency Response: 55Hz-15kHz

Sensitivity: 96dB

Specifications are subject to change without notice



AtlasSound.com

1601 JACK MCKAY BOULEVARD ENNIS, TEXAS 75119 U.S.A. • TELEPHONE: (800) 876-3333 • FAX: (800) 765-3435

©2003 ATLAS SOUND LP

Printed in China

00303

ATS001197 RevB 3/03

PP



GD87, GD87W

INSTALLATION INSTRUCTIONS

1. Use two wire nuts to attach the appropriate transforme wires to the field wiring.
2. Cut off the bare portion of the un-used leads.

Hardware Reference:

Model **GD87** Mounts to all Atlas Sound 8" baffles except FA series

Model **GD87W** is compatible with the following Atlas Sound hardware items:

Mounting Rings: 75-8(E2), 76-8(E2), P77-8, P78-8

T-Bridges: 81-8R, 81-8S

Enclosures: (EZ)95-8 Series, T95-8 Series, Q408, CS95-8, BMT95-8, BMT95-8-7

TAP WATTAGE	
1	Red
2	Orange
4	Blue
8	Yellow
COMMON	BLACK

Frequency Response: 55Hz-15kHz

Sensitivity: 96dB

Specifications are subject to change without notice



AtlasSound.com

1601 JACK MCKAY BOULEVARD ENNIS, TEXAS 75119 U.S.A. • TELEPHONE: (800) 876-3333 • FAX: (800) 765-3435

©2003 ATLAS SOUND LP

Printed in China

00303

ATS001197 RevB 3/03

PP